

Make	Model	Displacement	Year	Country	Engine	Info	Position
CAN AM (BRP)	COMMANDER E 4X4	48 V	2014	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER E 4X4	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER E 4X4 LSV	48 V	2014	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER E 4X4 LSV	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER E 4X4 LSV SE	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER E 4X4 XT	48 V	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2013	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited	1000	2012	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2015	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2015	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2016	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2016	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2017	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2017	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI X	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI X	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI X DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2015	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2016	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2017	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2016	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2017	ALL	54 KW(73 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2016	ALL	38 KW(51 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2017	ALL	38 KW(51 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2016	ALL	38 KW(51 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2017	ALL	38 KW(51 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2016	ALL	38 KW(51 PS)	Lug nut ALUG15BX	Rear

CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2017	ALL	38 KW(51 PS)	Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2003	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2003	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 2x4	400	2003	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2003	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 2x4	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2005	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2005	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4	1000	2012	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2012	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2020	ALL	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max LTD	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 Max	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max LTD	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2012	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2012	AMERICA	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2020	ALL	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 PRO T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 PRO T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2013	AMER-ICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2014	AMER-ICA	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2019	AMER-ICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2020	AMER-ICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2003	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2004	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2005	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2006	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 XT	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max XT	500	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2007	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 Max XT	400	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 XT	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max XT	500	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2008	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT-P	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT-P	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT-P	650	2011	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P	650	2011	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT	1000	2012	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2012	AMERICA	24 KW(33 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2013	AMERICA	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2013	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2013	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2014	AMERICA	24 KW(32,5 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2014	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2014	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2016	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P DPS	650	2017	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2017	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2013	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2013	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2014	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2014	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Limited DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 LTD	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs DPS	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X ds DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X ds DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X MR DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X XC	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2014	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT-R	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT-R	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-R	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-R	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT	800	2011	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2015	ALL		Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG15BX	Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4	800	2007	ALL		Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 500 EFI HO 4X4	500	2008	ALL		Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4	800	2008	ALL		Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Rear

CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2012	ALL	15 KW(20 PS); 52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4 X	800	2008	ALL		Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2012	AMER-ICA	52 KW(71 PS)	Must use ITP Lug nut ALUG15BX\	Rear