

| Make  | Model                     | Displacement | Year | Country | Engine | Info                     | Position         |
|-------|---------------------------|--------------|------|---------|--------|--------------------------|------------------|
| HONDA | MUV 700 Big Red           | 700          | 2009 | ALL     |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | MUV 700 Big Red           | 700          | 2010 | ALL     |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | MUV 700 Big Red           | 700          | 2011 | ALL     |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | MUV 700 Big Red           | 700          | 2012 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | MUV 700 Big Red           | 700          | 2013 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M2 4X4 Pioneer    | 700          | 2014 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M4 4X4 Pioneer-4  | 700          | 2014 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M2 4X4 Pioneer    | 700          | 2015 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M4 4X4 Pioneer-4  | 700          | 2015 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M2 4X4 Pioneer    | 700          | 2016 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M4 4X4 Pioneer-4  | 700          | 2016 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 1000 M3 4X4 Pioneer   | 1000         | 2016 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 1000 M5 4X4 Pioneer-5 | 1000         | 2016 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 500 M2 4X4 Pioneer    | 500          | 2017 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M2 4X4 Pioneer    | 700          | 2017 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M4 4X4 Pioneer-4  | 700          | 2017 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 1000 M3 4X4 Pioneer   | 1000         | 2017 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 1000 M5 4X4 Pioneer-5 | 1000         | 2017 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 1000 M3 4X4 Pioneer   | 1000         | 2018 | AMERICA |        | Use ITP Lug nut ALUG14BX | Right Front/rear |

|       |   |      |      |          |  |                          |                  |
|-------|---|------|------|----------|--|--------------------------|------------------|
| HONDA | SXS 700 M4 4X4 Pioneer-4                | 700  | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 1000 M5 4X4 Pioneer-5               | 1000 | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 500 M2 4X4 Pioneer                  | 500  | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | SXS 700 M2 4X4 Pioneer                  | 700  | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FM1 4X4 Fourtrax Foreman        | 500  | 2017 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FE2 4X4 Fourtrax Foreman ES EPS | 500  | 2017 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FE2 4X4 Fourtrax Foreman ES EPS | 500  | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FM1 4X4 Fourtrax Foreman        | 500  | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FE2 4X4 Fourtrax Foreman ES EPS | 475  | 2019 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FM1 4X4 Fourtrax Foreman        | 475  | 2019 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FM2 4X4 Fourtrax Foreman EPS    | 475  | 2019 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FE2 4X4 Fourtrax Foreman ES EPS | 475  | 2020 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 520 FM1 4X4 Fourtrax Foreman        | 518  | 2020 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA | TRX 500 FM2 4X4 Fourtrax Foreman EPS    | 475  | 2020 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 500 FE2 4X4 Fourtrax Foreman ES EPS | 475  | 2021 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 520 FM1 4X4 Fourtrax Foreman        | 518  | 2021 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA | TRX 500 FM2 4X4 Fourtrax Foreman EPS    | 475  | 2021 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA | TRX 420 TM1 Fourtrax Rancher            | 420  | 2017 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA | TRX 420 FM1 4X4 Fourtrax Rancher        | 420  | 2017 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA | TRX 420 FE1 4X4 Fourtrax Rancher ES     | 420  | 2017 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|       |   |     |      |              |  |                             |                     |
|-------|---|-----|------|--------------|--|-----------------------------|---------------------|
| HONDA | TRX 420 FA2 Fourtrax Rancher AT DCT EPS         | 420 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA5 Fourtrax Rancher AT DCT IRS         | 420 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA6 Fourtrax Rancher AT DCT IRS EPS     | 420 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA2 Fourtrax Rancher AT DCT EPS         | 420 | 2018 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA5 Fourtrax Rancher AT DCT IRS         | 420 | 2018 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA6 Fourtrax Rancher AT DCT IRS EPS     | 420 | 2018 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FE1 4X4 Fourtrax Rancher ES             | 420 | 2018 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM1 4X4 Fourtrax Rancher                | 420 | 2018 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TM1 Fourtrax Rancher                    | 420 | 2018 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TM1 Fourtrax Rancher                    | 420 | 2019 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TE1 Fourtrax Rancher                    | 420 | 2019 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM1 4X4 Fourtrax Rancher                | 420 | 2019 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FE1 4X4 Fourtrax Rancher ES             | 420 | 2019 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA2 4X4 Fourtrax Rancher AT DCT EPS     | 420 | 2019 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA6 4X4 Fourtrax Rancher AT DCT IRS EPS | 420 | 2019 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA5 4X4 Fourtrax Rancher AT DCT IRS     | 420 | 2019 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM2 4X4 Fourtrax Rancher EPS            | 420 | 2019 | EUROPE       |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TM1 Fourtrax Rancher                    | 420 | 2020 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TE1 Fourtrax Rancher                    | 420 | 2020 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM1 4X4 Fourtrax Rancher                | 420 | 2020 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |

|       |  |     |      |              |  |                             |                     |
|-------|--|-----|------|--------------|--|-----------------------------|---------------------|
| HONDA | TRX 420 FE1 4X4 Fourtrax Rancher ES                    | 420 | 2020 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA2 4X4 Fourtrax Rancher AT DCT EPS            | 420 | 2020 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA6 4X4 Fourtrax Rancher AT DCT IRS EPS        | 420 | 2020 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA5 4X4 Fourtrax Rancher AT DCT IRS            | 420 | 2020 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM2 4X4 Fourtrax Rancher EPS                   | 420 | 2020 | EUROPE       |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TM1 Fourtrax Rancher                           | 420 | 2021 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 TE1 Fourtrax Rancher                           | 420 | 2021 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM1 4X4 Fourtrax Rancher                       | 420 | 2021 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FE1 4X4 Fourtrax Rancher ES                    | 420 | 2021 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA2 4X4 Fourtrax Rancher AT DCT EPS            | 420 | 2021 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA6 4X4 Fourtrax Rancher AT DCT IRS EPS        | 420 | 2021 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FA5 4X4 Fourtrax Rancher AT DCT IRS            | 420 | 2021 | AMER-<br>ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 420 FM2 4X4 Fourtrax Rancher EPS                   | 420 | 2021 | EUROPE       |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| HONDA | TRX 500 FM6 Fourtrax Foreman Rubicon EPS               | 500 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |
| HONDA | TRX 500 FA5 Fourtrax Foreman Rubicon DCT               | 500 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |
| HONDA | TRX 500 FA6 Fourtrax Foreman Rubicon DCT EPS           | 500 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |
| HONDA | TRX 500 FA7 Fourtrax Foreman Rubicon DCT EPS<br>Deluxe | 500 | 2017 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |
| HONDA | TRX 500 FM6 Fourtrax Foreman Rubicon EPS               | 500 | 2018 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |
| HONDA | TRX 500 FA5 Fourtrax Foreman Rubicon DCT               | 500 | 2018 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |
| HONDA | TRX 500 FA6 Fourtrax Foreman Rubicon DCT EPS           | 500 | 2018 | ALL          |  | Use ITP Lug nut<br>ALUG14BX | Right Front/rear    |

|        |   |     |      |          |  |                          |                  |
|--------|---|-----|------|----------|--|--------------------------|------------------|
| HONDA  | TRX 500 FA7 Fourtrax Foreman Rubicon DCT EPS Deluxe     | 500 | 2018 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA  | TRX 500 FM6 4X4 Fourtrax Foreman Rubicon EPS            | 475 | 2019 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA  | TRX 500 FA6 4x4 Fourtrax Foreman Rubicon DCT EPS        | 475 | 2019 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA  | TRX 500 FA5 4X4 Fourtrax Foreman Rubicon DCT            | 475 | 2019 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA  | TRX 500 FA7 4X4 Fourtrax Foreman Rubicon DCT EPS Deluxe | 475 | 2019 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/rear |
| HONDA  | TRX 520 FM6 4X4 Fourtrax Foreman Rubicon EPS            | 518 | 2020 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FA6 4x4 Fourtrax Foreman Rubicon DCT EPS        | 518 | 2020 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FA5 4X4 Fourtrax Foreman Rubicon DCT            | 518 | 2020 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FA7 4X4 Fourtrax Foreman Rubicon DCT EPS Deluxe | 518 | 2020 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FM6 4X4 Fourtrax Foreman Rubicon EPS            | 518 | 2021 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FA6 4x4 Fourtrax Foreman Rubicon DCT EPS        | 518 | 2021 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FA5 4X4 Fourtrax Foreman Rubicon DCT            | 518 | 2021 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| HONDA  | TRX 520 FA7 4X4 Fourtrax Foreman Rubicon DCT EPS Deluxe | 518 | 2021 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R   | 700 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R   | 700 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R   | 700 | 2014 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R   | 700 | 2015 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R   | 700 | 2016 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R   | 700 | 2017 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FG 4X4 Grizzly                                  | 400 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |                             |     |      |          |  |                          |                  |
|--------|-----------------------------|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 450 FG 4X4 Grizzly      | 450 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FG 4X4 Grizzly      | 400 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FG 4X4 Grizzly      | 450 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FG 4X4 Grizzly      | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FG 4X4 Grizzly      | 450 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FG 4X4 Grizzly      | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGP 4X4 Grizzly EPS | 550 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FG 4X4 Grizzly      | 550 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FG 4X4 Grizzly      | 450 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGP 4X4 Grizzly EPS | 550 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FG 4X4 Grizzly      | 550 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FG 4X4 Grizzly      | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FG 4X4 Grizzly      | 450 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGP 4X4 Grizzly EPS | 450 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGP 4X4 Grizzly EPS | 550 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FG 4X4 Grizzly      | 550 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |                              |     |      |          |  |                          |                  |
|--------|------------------------------|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 700 FG 4X4 Grizzly       | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS  | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS  | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FG 4X4 Grizzly       | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FG 4X4 Grizzly       | 450 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGP 4X4 Grizzly EPS  | 450 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGP 4X4 Grizzly EPS  | 550 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FG 4X4 Grizzly       | 550 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FWA 4X4 Grizzly      | 550 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FWAN 4X4 Grizzly EPS | 700 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FWAN 4X4 Grizzly EPS | 450 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FWAD 4X4 Grizzly EPS | 550 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FG 4X4 Grizzly       | 450 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGP 4X4 Grizzly EPS  | 450 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FG 4X4 Grizzly       | 550 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGP 4X4 Grizzly EPS  | 550 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FG 4X4 Grizzly       | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP 4X4 Grizzly EPS  | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FWA 4X4 Grizzly      | 550 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FWAD 4X4 Grizzly EPS | 550 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |                              |     |      |          |  |                             |                     |
|--------|------------------------------|-----|------|----------|--|-----------------------------|---------------------|
| YAMAHA | YFM 700 FWAN 4X4 Grizzly EPS | 700 | 2013 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FWAN 4X4 Grizzly EPS | 450 | 2013 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 D 4X4 Grizzly        | 450 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 P 4X4 Grizzly EPS    | 450 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 D 4X4 Grizzly        | 550 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 P 4X4 Grizzly EPS    | 550 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 D 4X4 Grizzly        | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 P 4X4 Grizzly EPS    | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FWAN 4X4 Grizzly EPS | 700 | 2014 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 FWAD 4X4 Grizzly EPS | 550 | 2014 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FWAN 4X4 Grizzly EPS | 450 | 2014 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 P 4X4 Grizzly EPS    | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 D 4X4 Grizzly        | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FWAN 4X4 Grizzly EPS | 450 | 2015 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GP 4X4 Grizzly EPS   | 700 | 2016 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GD 4X4 Grizzly       | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FWAN 4X4 Grizzly EPS | 450 | 2016 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GP 4X4 Grizzly EPS   | 700 | 2017 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GP 4X4 Grizzly EPS   | 700 | 2018 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GP 4X4 Grizzly EPS   | 686 | 2019 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |



|        |                                     |     |      |          |  |                             |                     |
|--------|-------------------------------------|-----|------|----------|--|-----------------------------|---------------------|
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS Alu     | 708 | 2019 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GP 4X4 Grizzly EPS          | 686 | 2020 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS Alu     | 686 | 2020 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 400 FGH 4X4 Grizzly Hunter      | 400 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 400 FGH 4X4 Grizzly Hunter      | 400 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGH 4X4 Grizzly Hunter      | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGH 4X4 Grizzly Hunter      | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 FGPH 4X4 Grizzly EPS Hunter | 550 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 FGH 4X4 Grizzly Hunter      | 550 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2010 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 FGPH 4X4 Grizzly EPS Hunter | 550 | 2010 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 550 FGH 4X4 Grizzly Hunter      | 550 | 2010 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGH 4X4 Grizzly Hunter      | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |

|        |                                     |     |      |          |  |                          |                  |
|--------|-------------------------------------|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGPH 4X4 Grizzly EPS Hunter | 450 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGPH 4X4 Grizzly EPS Hunter | 550 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGH 4X4 Grizzly Hunter      | 550 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGH 4X4 Grizzly Hunter      | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGH 4X4 Grizzly Hunter      | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGPH 4X4 Grizzly EPS Hunter | 450 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGPH 4X4 Grizzly EPS Hunter | 550 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGH 4X4 Grizzly Hunter      | 550 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGPH 4X4 Grizzly EPS Hunter | 450 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FGH 4X4 Grizzly Hunter      | 450 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGPH 4X4 Grizzly EPS Hunter | 550 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGH 4X4 Grizzly Hunter      | 550 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGPH 4X4 Grizzly EPS Hunter | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGH 4X4 Grizzly Hunter      | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 DH 4X4 Grizzly Hunter       | 450 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 PH 4X4 Grizzly EPS Hunter   | 450 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |  |     |      |          |  |                          |                  |
|--------|--|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 550 DH 4X4 Grizzly Hunter                  | 550 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 PH 4X4 Grizzly EPS Hunter              | 550 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 DH 4X4 Grizzly Hunter                  | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 PH 4X4 Grizzly EPS Hunter              | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 PH 4X4 Grizzly EPS Hunter              | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 DH 4X4 Grizzly Hunter                  | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 GDH 4X4 Grizzly Hunter                 | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 GPH 4X4 Grizzly EPS Hunter             | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FB 4X4 Big Bear IRS                    | 400 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FBH 4X4 Big Bear IRS Hunter            | 400 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FBE 4X4 Big Bear IRS Exploring Edition | 400 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FB 4X4 Big Bear IRS                    | 400 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FBH 4X4 Big Bear IRS Hunter            | 400 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FB 4X4 Big Bear IRS                    | 400 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FBH 4X4 Big Bear IRS Hunter            | 400 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FBH 4X4 Big Bear IRS Hunter            | 400 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FB 4X4 Big Bear IRS                    | 400 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FB 4X4 Big Bear IRS                    | 400 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FBH 4X4 Big Bear IRS Hunter            | 400 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 400 FB 4X4 Big Bear IRS                    | 400 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |                                     |     |      |          |  |                          |                  |
|--------|-------------------------------------|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 400 FBH 4X4 Big Bear IRS Hunter | 400 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FA 4X4 Grizzly IRS          | 450 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FA 4X4 Grizzly IRS          | 450 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FA 4X4 Grizzly IRS          | 450 | 2014 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FA 4X4 Grizzly IRS          | 450 | 2015 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FA 4X4 Grizzly IRS          | 450 | 2016 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPX 4X4 Kodiak EPS          | 700 | 2016 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPH 4X4 Kodiak EPS Hunter   | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KD 4X4 Kodiak               | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KDH 4X4 Kodiak Hunter       | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPX 4X4 Kodiak EPS          | 700 | 2017 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KD 4X4 Kodiak               | 700 | 2017 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPX 4X4 Kodiak EPS          | 700 | 2018 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KD 4X4 Kodiak               | 700 | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KD 4X4 Kodiak               | 686 | 2019 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPX 4X4 Kodiak EPS          | 686 | 2019 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS Alu      | 708 | 2019 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS          | 708 | 2019 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KD 4X4 Kodiak               | 686 | 2020 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 KPX 4X4 Kodiak EPS          | 686 | 2020 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |  |     |      |          |  |                             |                     |
|--------|--|-----|------|----------|--|-----------------------------|---------------------|
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS Alu                     | 708 | 2020 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS                         | 708 | 2020 | EUROPE   |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPL 4X4 Grizzly EPS LE                     | 700 | 2017 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPL 4X4 Grizzly EPS LE                     | 700 | 2018 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPL 4X4 Grizzly EPS LTD                    | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FG OH 4X4 Grizzly Outdoorsman Edition      | 450 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGP OH 4X4 Grizzly EPS Outdoorsman Edition | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 RYR Raptor Gtyr Edition                    | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 Raptor                                     | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 Raptor                                     | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 Raptor                                     | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 R Raptor                                   | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |

|        |                                   |     |      |          |  |                          |                  |
|--------|-----------------------------------|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 700 Raptor                    | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R Raptor                  | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R Raptor                  | 700 | 2017 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 Raptor                    | 700 | 2017 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R Raptor                  | 700 | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 Raptor                    | 700 | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R Raptor                  | 686 | 2019 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 Raptor                    | 686 | 2019 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 R Raptor                  | 686 | 2020 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 Raptor                    | 686 | 2020 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FGP SE 4X4 Grizzly EPS SE | 550 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP SE 4X4 Grizzly EPS SE | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP SP 4X4 Grizzly EPS SE | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP SE 4X4 Grizzly EPS SE | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FWAD 4X4 Grizzly EPS SE   | 550 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FWAN 4X4 Grizzly EPS SE   | 700 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP SE 4X4 Grizzly EPS SE | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 550 FWAD 4X4 Grizzly EPS SE   | 550 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FWAN 4X4 Grizzly EPS SE   | 700 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FWAN 4X4 Grizzly EPS SE   | 700 | 2014 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |

|        |  |     |      |          |  |                             |                     |
|--------|--|-----|------|----------|--|-----------------------------|---------------------|
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS SE                 | 700 | 2016 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS SE                  | 700 | 2016 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS SE                 | 700 | 2017 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS SE                  | 700 | 2017 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS SE                 | 700 | 2018 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS SE                  | 700 | 2018 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS SE                 | 686 | 2019 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS SE                  | 686 | 2019 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 GPS 4X4 Grizzly EPS SE                 | 686 | 2020 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 KPS 4X4 Kodiak EPS SE                  | 686 | 2020 | ALL      |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FG SE 4X4 Grizzly Silver Edition       | 450 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGP SE 4X4 Grizzly EPS Special Edition | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition             | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 RSE2 Raptor Special Edition 2          | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 450 FG SP 4X4 Grizzly Special Edition      | 450 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGP SP 4X4 Grizzly EPS Special Edition | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition             | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 RSE2 Raptor Special Edition 2          | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 FGP SE 4X4 Grizzly EPS Special Edition | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition             | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut<br>ALUG14BX | Right<br>Front/Rear |

|        |  |     |      |          |  |                          |                  |
|--------|--|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2011 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2012 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Special Edition                            | 700 | 2012 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2013 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Special Edition                            | 700 | 2013 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 PS 4X4 Grizzly EPS Special Edition             | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2014 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Special Edition                            | 700 | 2014 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2015 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Special Edition                            | 700 | 2015 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2016 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Special Edition                            | 700 | 2016 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2017 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Special Edition                            | 700 | 2017 | EUROPE   |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 700 | 2018 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 686 | 2019 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 RSE Raptor Special Edition                     | 686 | 2020 | ALL      |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP DU 4X4 Grizzly EPS Ducks Unlimited Edition | 700 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP DU 4X4 Grizzly EPS Ducks Unlimited Edition | 700 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |



|        |  |     |      |          |  |                          |                  |
|--------|--|-----|------|----------|--|--------------------------|------------------|
| YAMAHA | YFM 700 FGP DU 4X4 Grizzly EPS Ducks Unlimited Edition | 700 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 FGP DU 4X4 Grizzly EPS Ducks Unlimited Edition | 700 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FX 4X4 Wolverine Sport                         | 450 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FX SE 4X4 Wolverine Sport SE                   | 450 | 2007 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FX 4X4 Wolverine Sport                         | 450 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FX SE 4X4 Wolverine Sport SE                   | 450 | 2008 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FX 4X4 Wolverine Sport                         | 450 | 2009 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 450 FX 4X4 Wolverine Sport                         | 450 | 2010 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |
| YAMAHA | YFM 700 4X4 Grizzly EPS XT-R                           | 686 | 2020 | AMER-ICA |  | Use ITP Lug nut ALUG14BX | Right Front/Rear |