

Make	Model	Displacement	Year	Country	Engine	Info	Position
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2013	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited	1000	2012	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Limited DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2014	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2015	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2015	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2016	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2016	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max DPS	1000	2017	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max Limited DPS	1000	2017	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI X	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI X	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI X DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT	1000	2011	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT	1000	2012	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2013	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2014	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2014	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2015	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2015	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2016	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2016	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 EFI XT-P DPS	1000	2017	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	COMMANDER 1000 EFI Max XT DPS	1000	2017	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2016	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2017	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2016	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2017	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 DPS	976	2019	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max DPS	976	2017	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max DPS	976	2019	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Mossy Oak Hunting Edition DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Mossy Oak Hunting Edition DPS	976	2019	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max Lone Star DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max Lone Star DPS	976	2019	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max X MR DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 X MR DPS	976	2019	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max X MR DPS	976	2019	AMER-ICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2016	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2016	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	DEFENDER HD10 4X4 Max XT DPS	976	2017	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2017	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2017	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT-P DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max XT DPS	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max XT DPS CAB	976	2018	ALL	54 KW(73 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS	976	2019	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT DPS CAB	976	2019	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 XT-P DPS	976	2019	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max XT DPS	976	2019	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD10 4X4 Max XT DPS CAB	976	2019	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD5 4X4	427	2018	ALL	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD5 4X4	427	2019	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD5 4X4 DPS	427	2018	ALL	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD5 4X4 DPS	427	2019	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2016	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2017	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	DEFENDER HD8 4X4	800	2019	AMER-ICA	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2016	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2017	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 DPS	800	2019	AMER-ICA	37 KW(50 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max DPS	800	2017	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max DPS	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max	800	2019	AMER-ICA	37 KW(50 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max DPS	800	2019	AMER-ICA	37 KW(50 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2016	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max XT DPS	800	2017	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2017	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS CAB	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max XT DPS	800	2018	ALL	38 KW(51 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS	800	2019	AMER-ICA	37 KW(50 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 XT DPS CAB	800	2019	AMER-ICA	37 KW(50 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	DEFENDER HD8 4X4 Max XT DPS	800	2019	AMER-ICA	37 KW(50 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 900 HO EFI 4X4 X3 DPS	900	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2003	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2003	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 2x4	400	2003	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2003	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 2x4	400	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 2x4	330	2005	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 330 HO 4X4	330	2005	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2005	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4	500	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4	500	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4	650	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4	1000	2012	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2012	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2014	AMER-ICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4	450	2015	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 500 EFI 4X4	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4	450	2016	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 570 EFI 4X4	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	450	2018	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	427	2019	AMER-ICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2019	AMER-ICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4	650	2019	AMER-ICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4	854	2019	AMER-ICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4	427	2020	ALL	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4	570	2020	AMER-ICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4 DPS	450	2015	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 500 EFI 4X4 DPS	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 DPS	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4 DPS	450	2016	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 570 EFI 4X4 DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	450	2018	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 DPS	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 DPS	650	2019	ALL	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	427	2019	AMER-ICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2019	AMER-ICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 6x6 DPS	450	2019	AMER-ICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 DPS	650	2019	AMER-ICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 DPS	854	2019	AMER-ICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 DPS	570	2020	ALL	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 DPS	427	2020	AMER-ICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 570 EFI 4X4 DPS LE	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2005	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max	500	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max LTD	800	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 Max	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max	500	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max	650	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max LTD	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2012	AMER-ICA	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2012	AMER-ICA	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2013	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2014	AMERICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4 Max	450	2015	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 500 EFI 4X4 Max	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4 Max DPS	450	2015	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 500 EFI 4X4 Max DPS	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max Limited DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max DPS	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4 Max	450	2016	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 570 EFI 4X4 Max	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 450 EFI 4X4 Max DPS	450	2016	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 570 EFI 4X4 Max DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	450	2017	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	450	2018	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	450	2018	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	427	2019	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2019	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	427	2019	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max DPS	650	2019	AMERICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max DPS	570	2020	ALL	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max	570	2020	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max DPS	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 6x6 Max DPS	450	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 North Edition	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 North Edition	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max North Edition	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max North Edition	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 North Edition	650	2019	AMERICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 North Edition	854	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max North Edition	650	2019	AMERICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max North Edition	854	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Mossy Oak Hunting Edition DPS	450	2018	ALL	29 KW(39 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Mossy Oak Hunting Edition DPS	427	2019	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Mossy Oak Hunting Edition DPS	427	2020	AMERICA	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Mossy Oak Hunting Edition DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T	427	2019	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T DPS	427	2019	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 PRO T DPS	427	2019	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 PRO T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max T DPS	427	2019	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max Pro+ T DPS	650	2019	EUROPE	43 KW(59 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 T DPS	650	2019	EUROPE	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 Pro+ Sidewall T DPS	976	2019	EUROPE	61 KW(82 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 Max Pro+ Sidewall T DPS	976	2019	EUROPE	61 KW(82 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 Max T DPS	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 PRO T DPS	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 PRO T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T	427	2020	EUROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T	570	2020	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 450 EFI 4X4 T DPS	427	2020	EU-ROPE	28 KW(38 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 T DPS	570	2020	EU-ROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2013	AMER-ICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2014	AMER-ICA	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X MR DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER L 570 EFI 4X4 X MR DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2019	AMER-ICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 X MR DPS	650	2019	AMER-ICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 850 EFI 4X4 X MR DPS	854	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 X MR DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 X XC T DPS	976	2019	EUROPE	61 KW(82 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2003	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2004	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2005	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2005	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2006	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 XT	500	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max XT	500	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 XT	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 HO 4X4 Max XT	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 XT	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI HO 4X4 Max XT	400	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 XT	500	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI HO 4X4 Max XT	500	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 XT	650	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI HO 4X4 Max XT	650	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 XT	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 EFI HO 4X4 Max XT	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2009	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2010	ALL	23 KW(31 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT-P	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT-P	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2011	ALL	24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT	650	2011	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT-P	650	2011	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P	650	2011	AMERICA	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT	1000	2012	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P	650	2012	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2012	ALL	15 KW(20 PS); 24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2012	AMERICA	24 KW(33 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2013	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2013	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2013	AMERICA	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2013	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2013	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 Max XT	400	2014	ALL	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2014	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 400 EFI 4X4 XT	400	2014	AMERICA	24 KW(32,5 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2014	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2014	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2014	AMERICA	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 XT-P DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P DPS	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2015	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2015	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 XT DPS	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 500 EFI 4X4 Max XT DPS	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2016	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2016	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	850	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P DPS	650	2017	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	850	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 6x6 XT DPS	650	2017	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT	1000	2017	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2018	ALL	46 KW(63 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT DPS	1000	2018	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 XT DPS	650	2019	AMERICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT DPS	854	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 850 EFI 4X4 XT-P DPS	850	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT DPS	650	2019	AMERICA	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT DPS	854	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 850 EFI 4X4 Max XT-P DPS	854	2019	AMERICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 6x6 XT DPS	976	2019	AMERICA	61 KW(82 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT T DPS	570	2019	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 T XT DPS	650	2019	EUROPE	46 KW(62 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT T DPS	650	2019	EUROPE	43 KW(59 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 EFI 4X4 Max XT-P T DPS	650	2019	EUROPE	43 KW(59 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 EFI 4X4 Max XT-P T DPS	976	2019	EUROPE	61 KW(82 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 XT DPS	570	2020	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 570 EFI 4X4 Max XT T DPS	570	2020	EUROPE	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2018	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI	800	2019	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI DPS	1000	2018	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2018	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 DPS	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI DPS	800	2019	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI DPS	1000	2019	AMERICA	68 KW(92 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Limited DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Limited DPS	1000	2018	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Limited DPS	1000	2019	AMERICA	68 KW(92 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 LTD	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max LTD	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2013	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max DPS	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Max DPS	1000	2018	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	COMMANDER 1000 R EFI Max Limited DPS	1000	2018	AMER-ICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI Max DPS	800	2019	AMER-ICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Max Limited DPS	1000	2019	AMER-ICA	68 KW(92 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max Limited DPS	976	2019	AMER-ICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Mossy Oak Hunting Edition DPS	1000	2018	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Mossy Oak Hunting Edition DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Mossy Oak Hunting Edition DPS	976	2019	AMER-ICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs	1000	2013	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs	1000	2013	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs	1000	2014	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR	1000	2014	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs DPS	1000	2014	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2014	AMER-ICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X ds DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X MR DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X rs DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X ds DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X rs DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X MR DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X MR DPS	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 Max X MR DPS	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X MR DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 X XC	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2014	AMERICA	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2015	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2016	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2017	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 XC DPS	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	MAVERICK 1000 R EFI 4X4 X XC DPS	1000	2018	ALL	75 KW(102 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X XC DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 X XC DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT	650	2009	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 XT-R	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 650 R EFI 4X4 Max XT-R	650	2010	ALL	44 KW(60 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-R	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-R	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT	800	2011	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P	800	2012	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 XT-P DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 800 R EFI 4X4 Max XT-P DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2015	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2016	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2017	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI XT DPS	1000	2018	ALL	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2018	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Max XT DPS	1000	2018	AMERICA	63 KW(86 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 800 R EFI XT DPS	800	2019	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI XT DPS	1000	2019	AMERICA	68 KW(92 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	COMMANDER 1000 R EFI Max XT DPS	1000	2019	AMERICA	68 KW(92 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 XT-P DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	OUTLANDER 1000 R EFI 4X4 Max XT-P DPS	976	2019	AMERICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4	800	2007	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI HO 4X4	500	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2009	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2010	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2011	ALL	30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2012	ALL	15 KW(20 PS); 52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2012	ALL	15 KW(20 PS); 30 KW(41 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4	1000	2012	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2013	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2013	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4	1000	2013	AMERICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2014	ALL	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2014	ALL	35 KW(47 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4	1000	2014	AMER-ICA	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4	1000	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 500 EFI 4X4	500	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4	570	2016	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4	800	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4	800	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4	800	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4	570	2019	AMER-ICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4	854	2019	AMER-ICA	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4	976	2019	AMER-ICA	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 EFI HO 4X4 X	800	2008	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X MR DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4 X MR DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X MR DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4 X MR DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X MR DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X MR DPS	976	2019	ALL	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4 X MR DPS	570	2019	AMERICA	35 KW(48 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2009	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2010	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2011	ALL	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4 X XC	1000	2012	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC	800	2012	AMERICA	52 KW(71 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4 X XC DPS	1000	2013	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC DPS	800	2013	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4 X XC DPS	1000	2014	ALL	61 KW(83 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC DPS	800	2014	AMERICA	53 KW(72 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 EFI 4X4 X XC DPS	1000	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 800 R EFI 4X4 X XC DPS	800	2015	ALL		Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4 X XC DPS	800	2016	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X XC DPS	1000	2016	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4 X XC DPS	800	2017	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X XC DPS	1000	2017	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear

CAN AM (BRP)	RENEGADE 570 EFI 4X4 X XC DPS	570	2017	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 570 EFI 4X4 X XC DPS	570	2018	ALL	36 KW(49 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4 X XC DPS	800	2018	ALL	58 KW(79 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X XC DPS	1000	2018	ALL	66 KW(90 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 850 EFI 4X4 X XC DPS	854	2019	ALL	57 KW(78 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X XC DPS	976	2019	ALL	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 650 EFI 4X4 X XC T DPS	650	2019	EU-ROPE	43 KW(59 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear
CAN AM (BRP)	RENEGADE 1000 R EFI 4X4 X XC T DPS	976	2019	EU-ROPE	67 KW(91 PS)	Must use ITP Lug nut ALUG14BX	Right Front/Rear